



Wireless equipment for Torque wrench Transmitter

TW-510T

Instruction Manual V2.50

Please use this Instruction manual correctly on reading well.
Please keep it carefully to be able to read immediately, when required.

To use this product in safety and comfort, (Be sure to read)

Thank you very much for purchasing our product.

This operation manual contains the precautions necessary for preventing an accident caused by the use in an improper ways.

Read it carefully while thoroughly understanding the meanings of pictorial symbols.



Warning

Using in an improper way while ignoring this pictorial symbol might cause a serious human injury.



Caution

Using in an improper way while ignoring this pictorial symbol might cause a human injury or physical damage.

- The type of precautions that should be observed, are classified using the following pictorial symbols.



This pictorial symbol indicates a "Reminder" to attract an attention.



This pictorial symbol indicates a "Prohibition" to prohibit a certain action.



Caution

- For the usage to be commonly applied in all the models:

- Avoid using in a place with a plenty of humidity or dust. Otherwise, absorbing a dust or water contents may cause machine trouble, fire or electrical shock.





- For handling this machine:

- This is the electronic devise or wireless radios composed of the precision parts. Do not overhaul/remodel. It may cause accident or machine trouble.













Warning

■ For handling this machine:

| | |
|--|---|
| ● Do not use this product for the application needing the high reliability related to human lives. |  |
| ● Do not use this product in a place where it is uncertain about whether or not radio waves reach. |  |



■ For handling the power source:

Be sure to observe the following precautions to prevent the AC adapter and Power cord from being heated, damaged or ignited.

| | |
|---|---|
| ● Do not approximate the AC adapter and Power cord to a fire, or do not put them into a fire. The AC adapter and Power cord can be broken or ignited, resulting in an accident. |  |
| ● You can use the AC adapter and main body only with the specified power voltage to protect them from the damage and fire accident. |  |
| ● Do not use the AC adapter and main body in a wettable atmosphere. It may cause accidents or troubles such as heating, igniting or electrical shock. |  |
| ● Do not touch the AC adapter, main body, Power cord and Plug outlet with wet hands. It may cause an electrical shock. |  |
| ● Do not damage the Power cord. A short-circuit or heating may cause a fire or electrical shock. |  |
| ● Do not use the Power plug with dust being adhered. A short-circuit or heating may cause a fire or electrical shock. |  |
| ● Do not give a strong impact onto the AC adapter. It may cause an accident or machine failure. |  |
| ● If you find out deformed AC adapter, do not use it. It may cause an accident or machine failure. |  |
| ● do not use this product in a place where flammable gas can be generated. It may cause a fire accident. |  |
| ● Never overhaul the AC adapter. It may cause an accident or machine failure. |  |


■ When trouble happens during use:

Since it may cause a fire or electrical accident, disconnect a power plug, and immediately ask outlet store or our company to repair.

| | |
|---|---|
| ● When smoke or abnormal odors are generated, stop using, immediately disconnect a power plug, and ask outlet store or our company to repair. |  |
| ● Once the Power cord is damaged, do not use it. Using it as is may cause a fire or electrical accident. |  |

**This operation manual is translated a product for Japan into English/
This product is based on Japanese Wireless law.**

Descriptions of Product number label

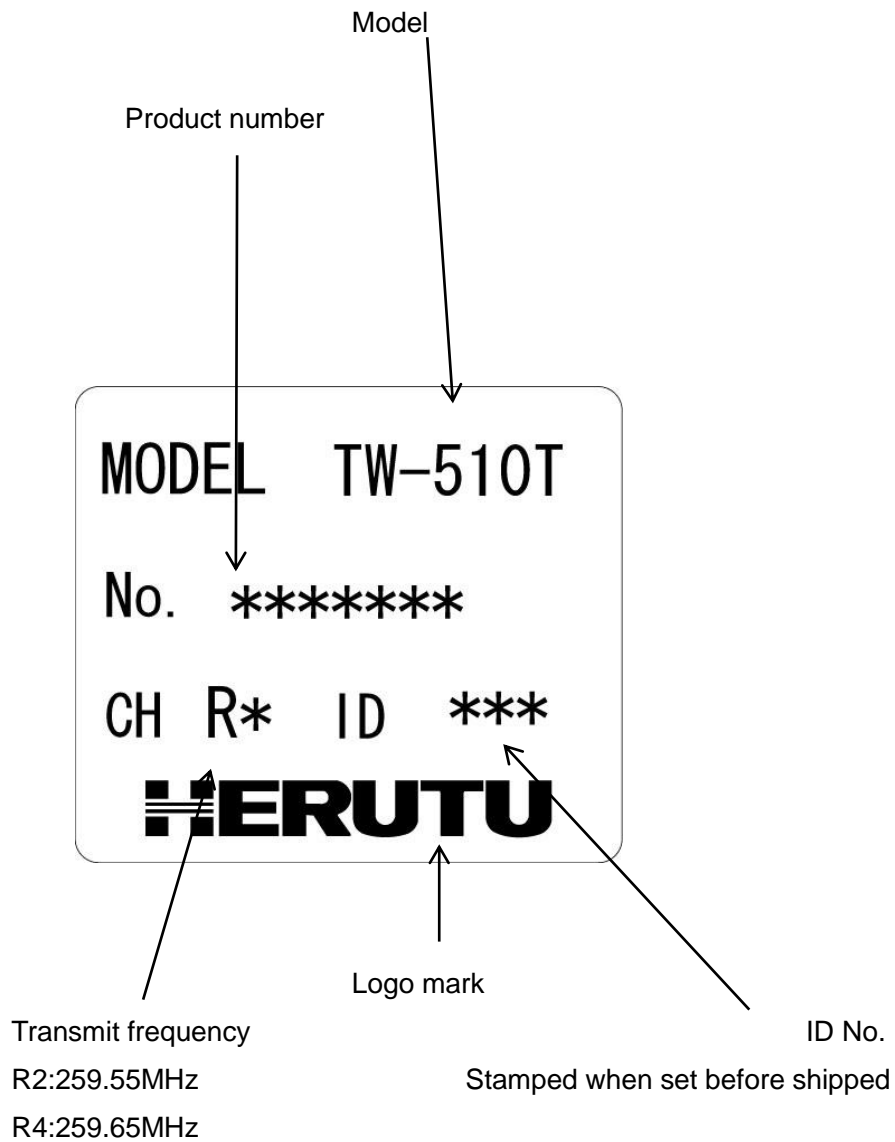

Contents

| | |
|--|----|
| 1.General descriptions..... | 1 |
| 1-1.Features..... | 1 |
| 2.Specifications | 2 |
| 3.Name of each section..... | 3 |
| 4.Dimension drawing | 5 |
| 5.To install on the Torque wrench..... | 6 |
| 5-1.Preparation for installation..... | 6 |
| 5-2.Installation..... | 8 |
| 6.To change the ID setting..... | 11 |
| 6-1.Displaying method of ID | 11 |
| 6-2.To change the ID setting..... | 12 |
| 7.Operation methods | 13 |
| 7-1.To test the Transmitter | 13 |
| 7-2.Operating timing | 14 |
| 7-3.To replace the battery | 15 |
| 8.Precautions during use..... | 17 |
| 9.Troubleshooting..... | 18 |
| 10.Warranty | 19 |
| 11.Option | 22 |
| Appendix ID Setting list | 23 |

1.General descriptions

1.General descriptions

Thank you very much for purchasing the Wireless Equipment for Torque Wrench Transmitter TW-510T”.

This operation manual contains the instructions necessary for using the “TOBISHIME Transmitter TW-510T” (hereinafter specified as “TW-510T”). Thoroughly read through this manual before use to correctly operate.

Once the TW-510T is mounted on the Torque wrench with Limit switch (LS), the tightening completion signal of Torque wrench can be transmitted to each series of our TW-510R.

This high capacity Radio Transmitter running through the weak radio wave of 260MHz zone provides the noise-proof and reliable system.

1-1.Features

- This machine is designed as the successor device to the TW-200T, intended for miniaturizing the overall dimensions.
- The Torque wrench with Limit Switch (LS) currently being used can be easily remodeled into the wireless type.
- This Transmitter consists of compact design using the coin battery type power supply.
- License and qualification for radio unwanted.
- Noiseless weak radio wave of 260MHz-zone is used.
- The antenna-built-in type is superior in handling (controllability).
- The ABS resin case mounted enables the dust & oil mist proof.
- The 8-bit code can be set so that multiple units can be used.

2.Specifications

2.Specifications

| Items | Specification | Remarks |
|----------------------------------|--|------------------------------|
| Frequency | 259.55MHz | R2 *1 |
| | 259.65MHz | R4 *1 |
| Intensity of radio wave | Electric intensity at 3m distance is 500 μ V/m or less | Weak radio wave |
| Modulation method | Binary FSK by the direct modulation | |
| Transmission method | Unidirectional transmission | |
| Transmit data | 14-bit/1-frame Approximate 7-9frame transmission | 1-shot |
| Input | Limit SW \times 1 | SS-01GL(Omron) |
| | Test SW \times 1 | |
| Communication distance | Approximate 10m in radius | *2 |
| Guarantee of working temperature | 0-50 $^{\circ}$ C | |
| Power supply | Coin battery CR2032(3V) | |
| Battery life | Approximate 250,000-shot | Measured at interval of 1sec |
| 1-shot time | Approximate 300mS | |
| Antenna | Mounted in case | |
| ID setting | 8-bit Dip SW | |
| Display | Battery check display LED | |
| External size | 34 \times 71 \times 17.5mm | See drawing. |
| Weight | 40g (Seat, Limit SW and battery are included) | |


*1:Use either R2 or R4 frequency. (Stated on product number label)

*2:It may sometime disable the communication at the place with a lot of radiation noise emitted from an electrical welding equipment.


It is possible to interrupt communication at the dead point where a reflected electric wave interferes. We recommend you to use Diversity type receiver (TW-510RD) in such a case.

3.Name of each section

3.Name of each section


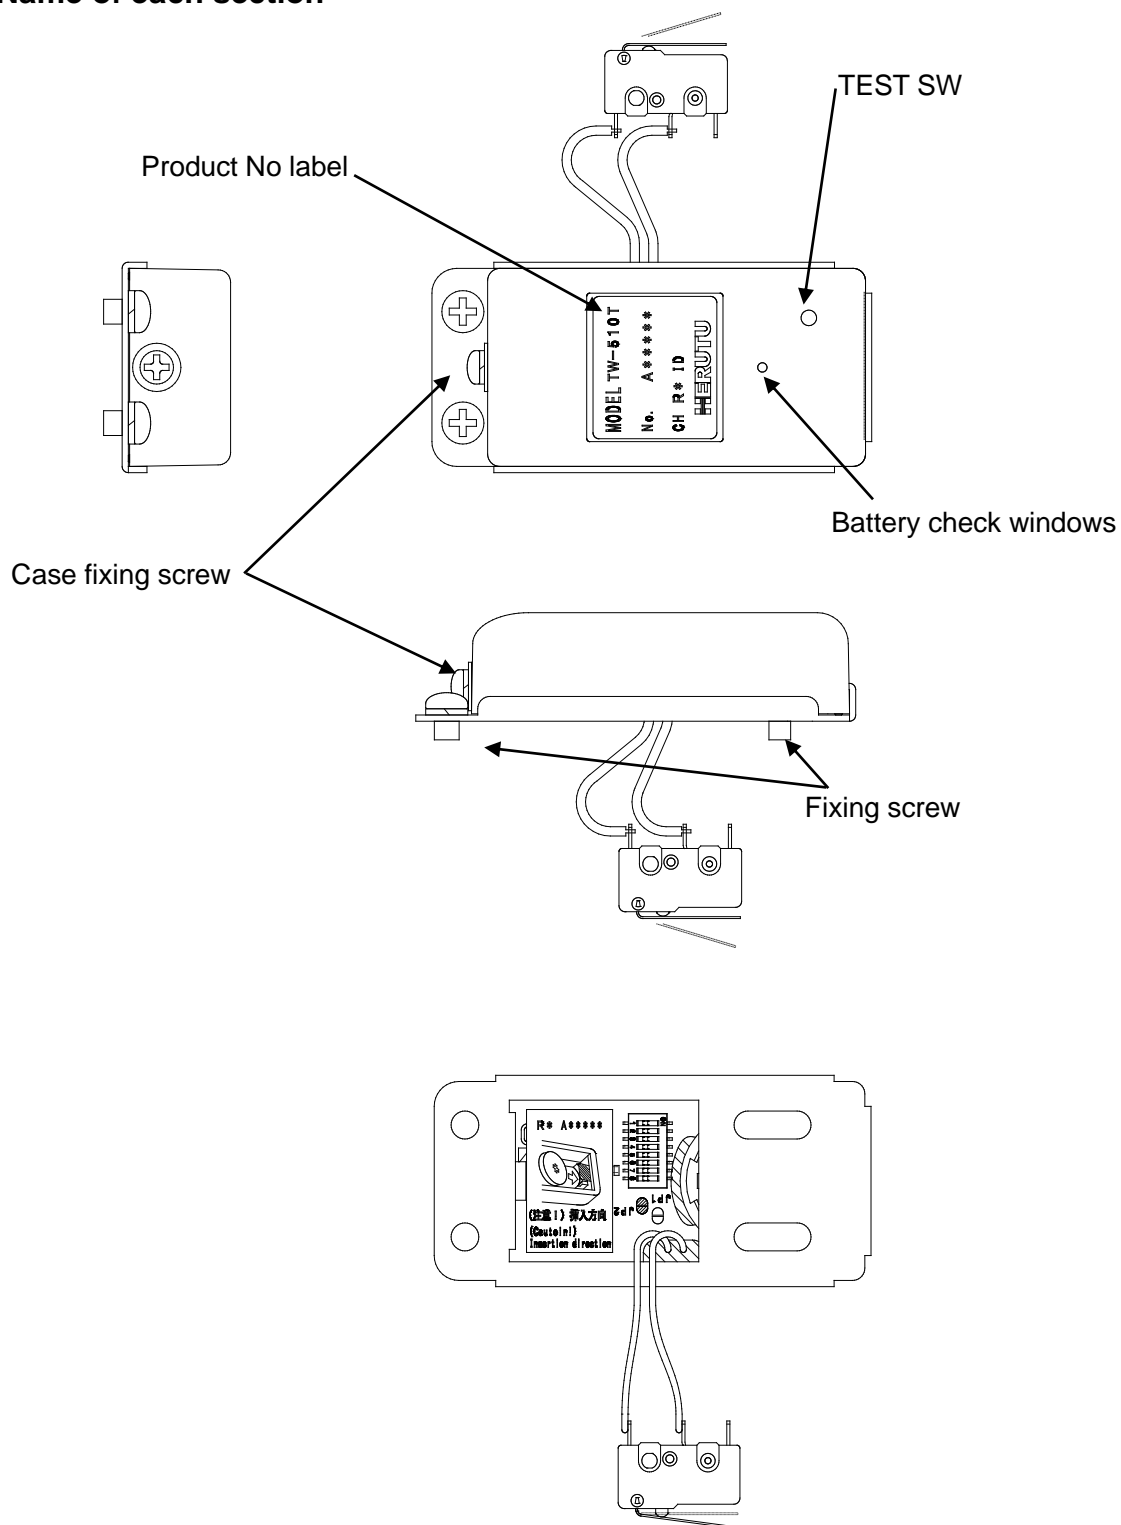


3.Name of each section

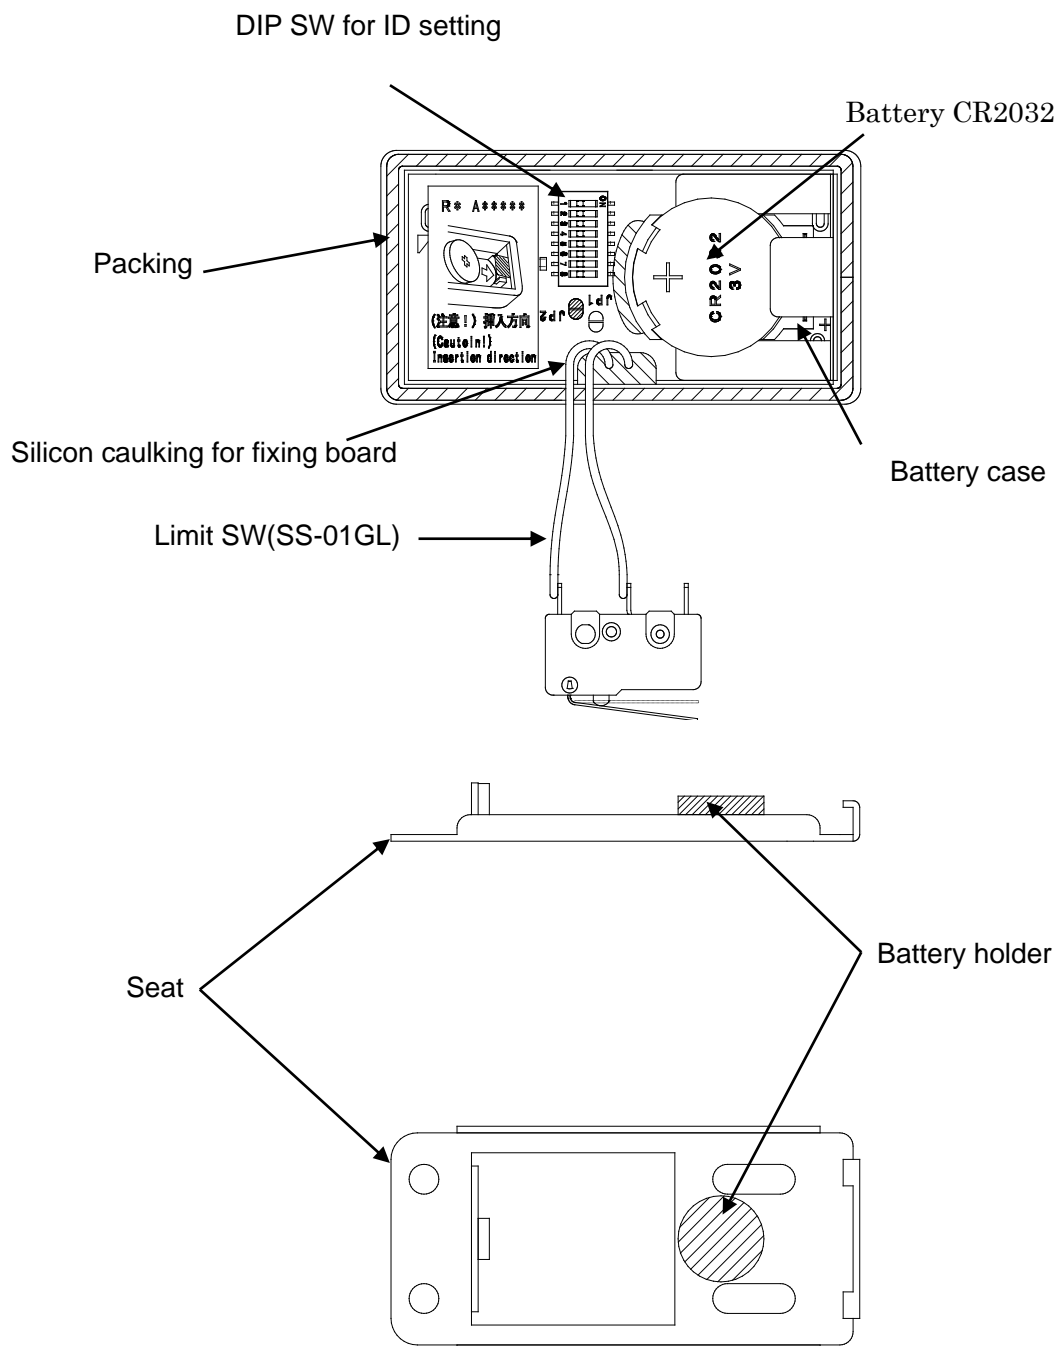

4. Dimensional drawing

4. Dimensional drawing

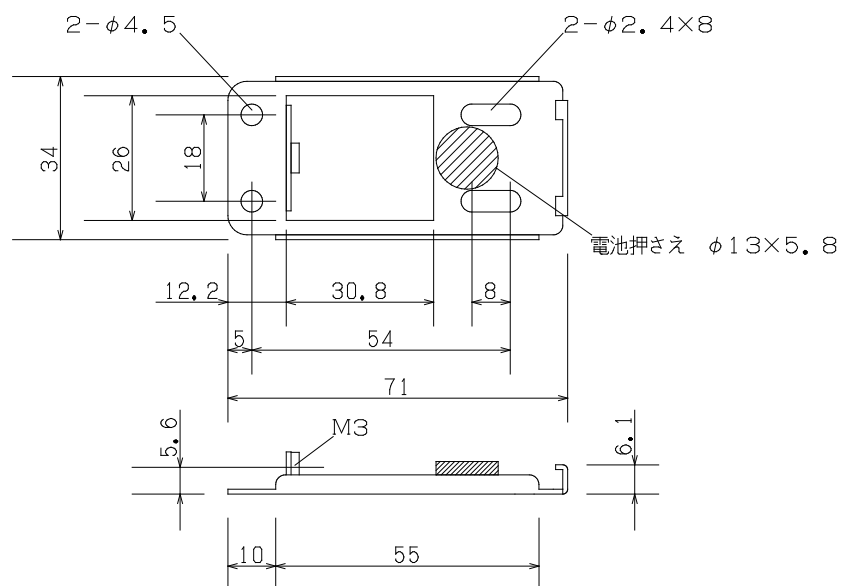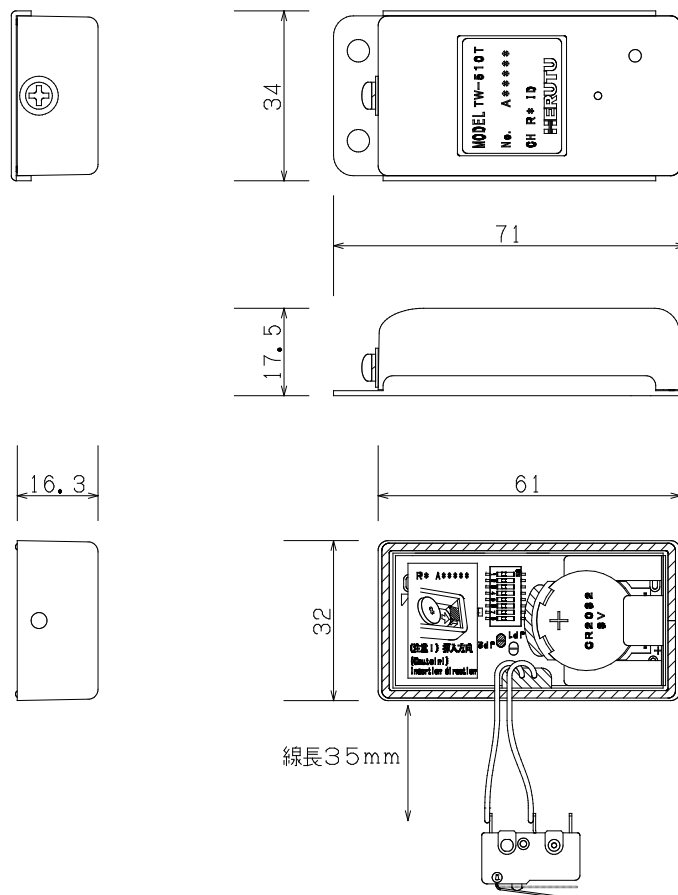


5.To install on the Torque wrench

5.To install on the Torque wrench

5-1.Preparation for installation


1)Check the parts necessary for installation.

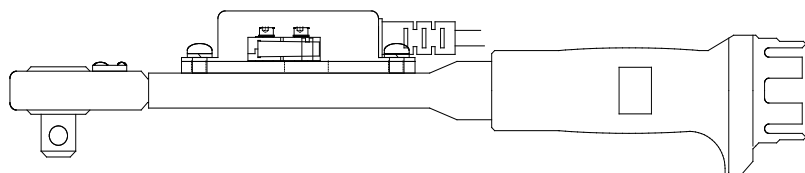

Torque wrench with Limit SW(LS) (User shall prepare)

Note) Depending on the type of Torque wrench, transmitter may not be installed. Contact our sales office.

Transmitter and a set of accessories

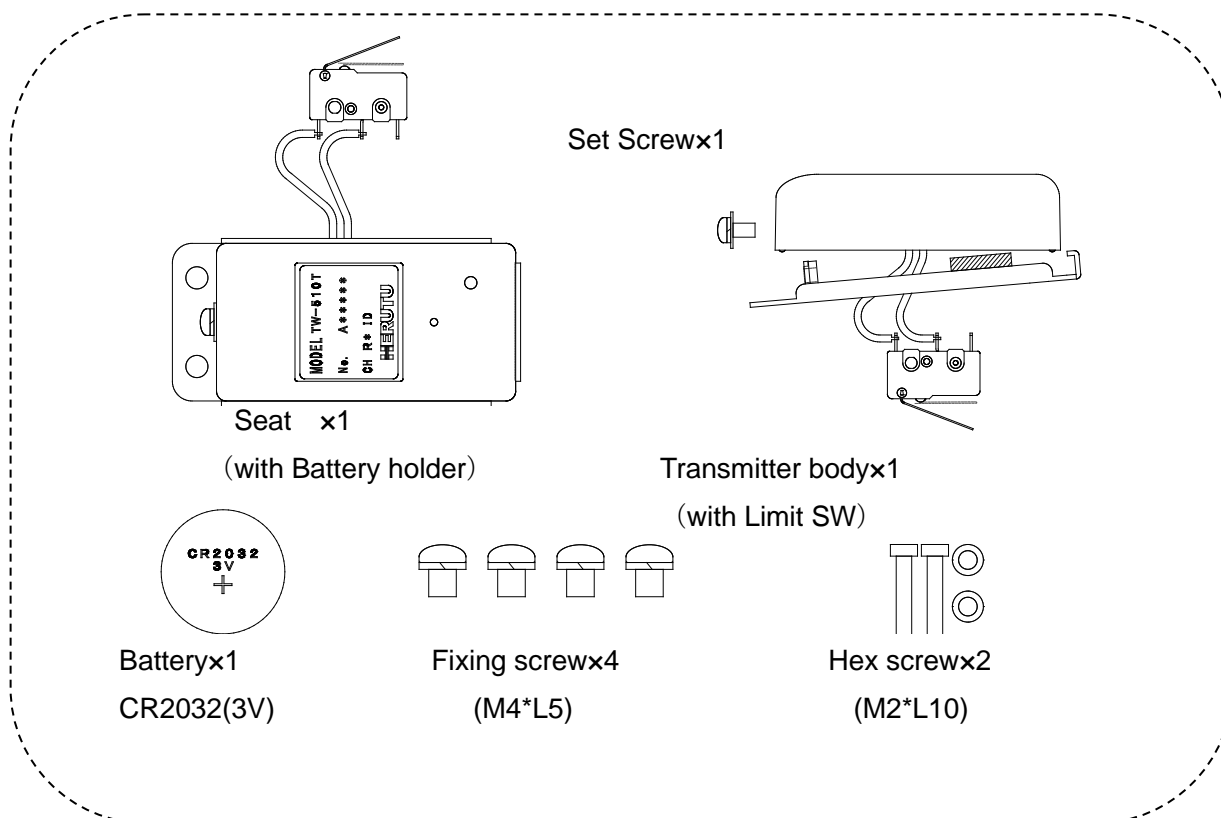


2)Tools necessary for installation


- Allen wrench : Size 1.5mm
- Phillips screwdriver : Size #2
- Screw locking agent
- Prick punch (sharp edge)

5.To install on the Torque wrench

3)Remove the Cover and Limit SW.

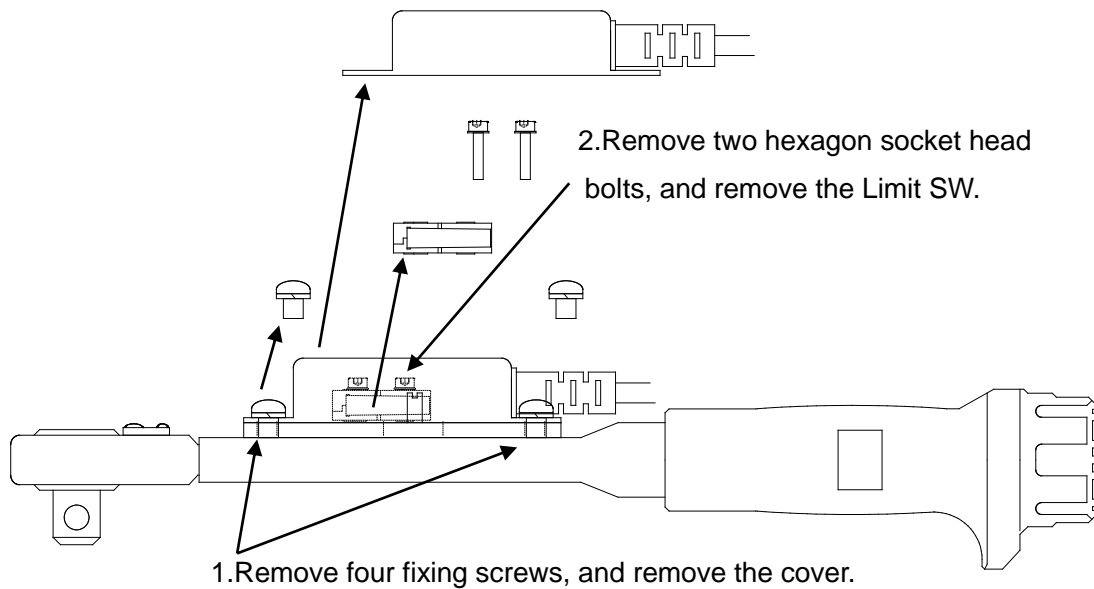

Because the limit SW mounted with Torque wrench as standard has the different current capacity, do not use it.

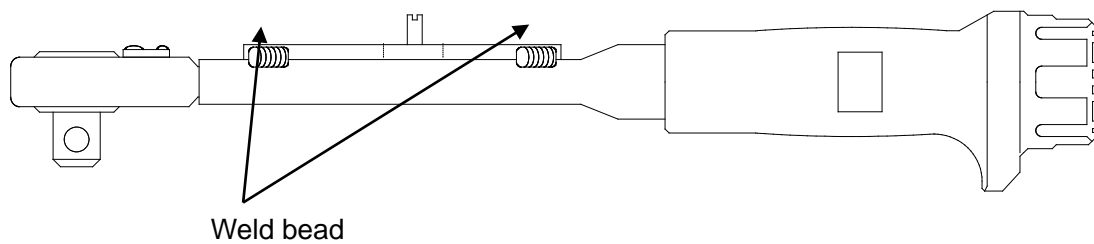

3.Verify that the Seat of Torque wrench is flat.

If the weld bead is protruded from the Seat, grind it.


5.To install on the Torque wrench

5-2.Installation

1)To install the Seat

-Fix the Seat with four fixing screws.

-For the application with heavy oil mist, fill up the caulking agent between Wrench seat and Seat and also between Wrench shaft and Wrench seat to protect the internal board.

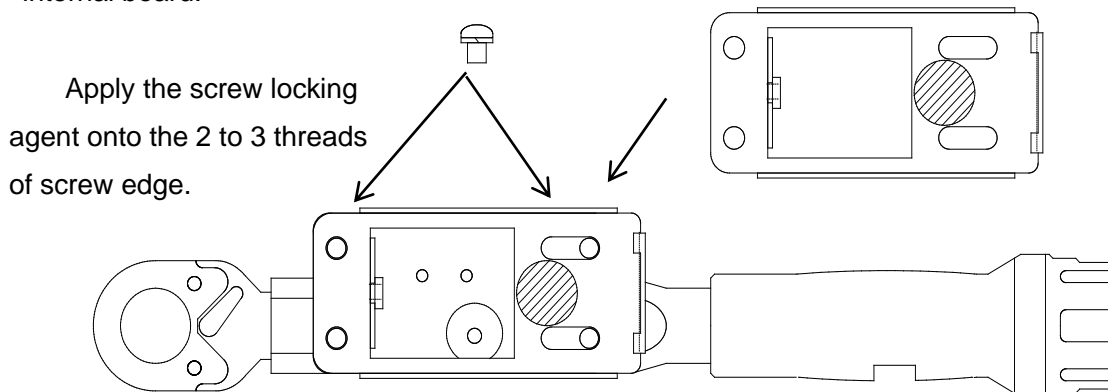


2)For ID setting

-See the next article(6. To change ID) .

3)-Fix the Transmitter Limit SW with two hexagon socket head bolts(which was removed).

-Verify that the moving range of wrench lever is well suited for the movement range of switch during the wrench in movement.


The hexagon socket head bolt requires a washer.

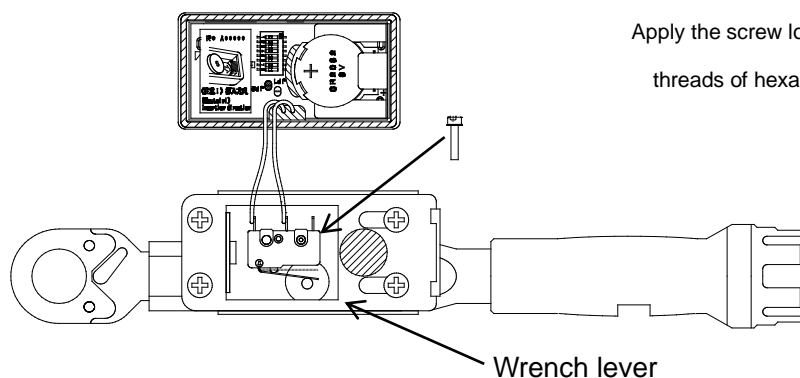

Apply the screw locking agent on 2 to 3 threads of hexagon socket head bolt.

5.To install on the Torque wrench

4)Hook the Transmitter on the Case holder of Seat, set it with an attention being paid not to bite the cord, and fix it with the set screw as firmly pushing the case.

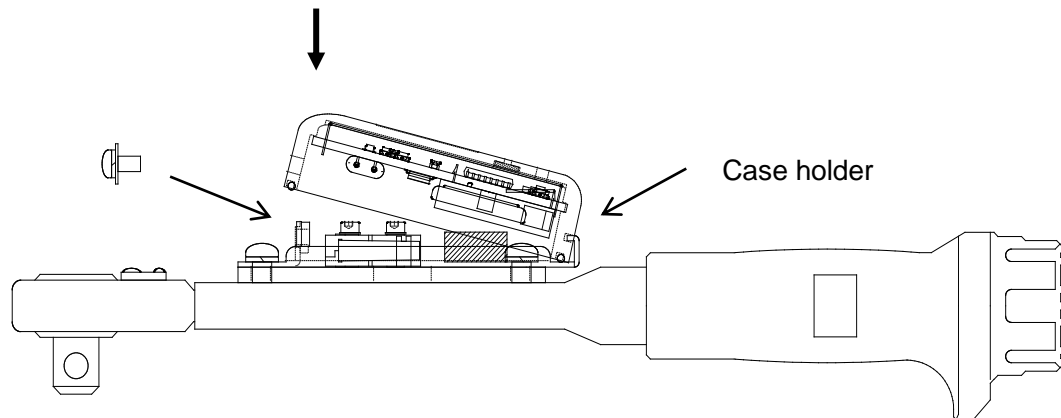

<Installation and confirmation method of Limit switch>

When the lever movement reach of the torque spanner is small, it isn't possible to hit limit switch, and a transmitter doesn't send. Please be careful sufficiently in case of a limit switch installation. We'll recommend to install it using testers and confirm the state as follows.


1. A wrench is made an adjustment to the use Newton value
2. The limit switch is tacked in a wrench.
3. The connector of wrench socket is set on the vice table or to fix it in order to turn the bolt. Please be careful sufficiently not to be broken the wrench.
4. Limit switch is connected with a tester.(+)(-) is as follows.
5. A limit switch of a wrench moves a wrench to the done location and fixes hexagon socket head cap bolt by the location a limit switch enters certainly. A wrench has a roughly 2 sets of mounting hole, and the person who arrives obediently is chosen. Hexagon socket head cap bolt is M2 and a mounting hole of a limit switch is ϕ 2.35, so it's adjusted by slanting having for this difference. Please bend and don't adjust a lever. When the torque did the location of the lever, it's adjusted at the location which isn't forced more than level.

5. To install on the Torque wrench

6. It's confirmed whether it receives in its state and normally outputs.

It's confirmed once again whether the lever location isn't forced too much.

7. A case of TW-510T is covered, and it's confirmed whether a receiver normally receives.

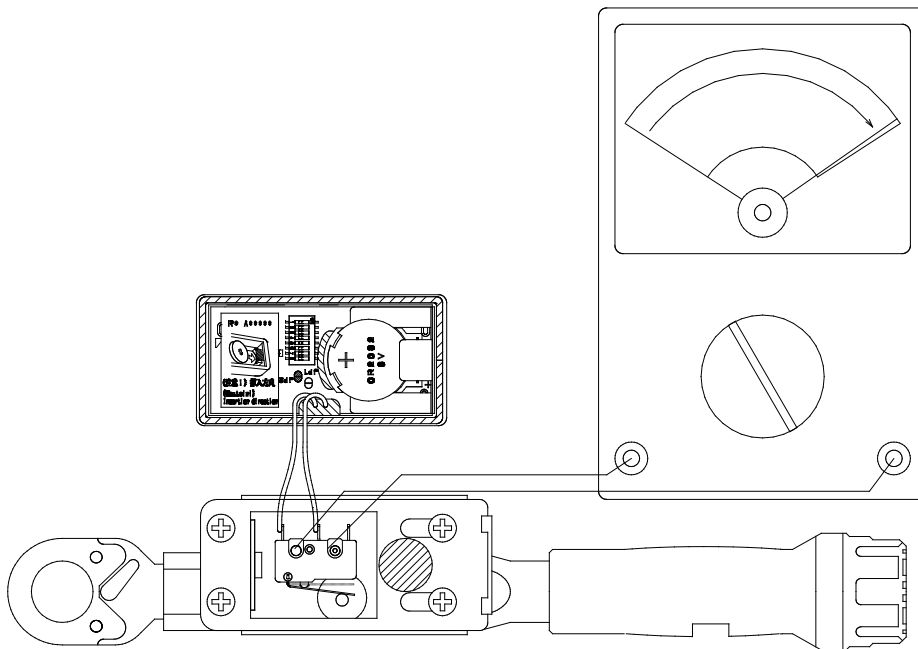


6.To change the ID setting

6.To change the ID setting

6-1.Displaying method of ID

The ID is normally addressed in decimal notation, however, for setting, convert it into binary notation and set it with the DIP Switch.


The following figure shows the case where each bit of DIP switch is set in decimal notation.

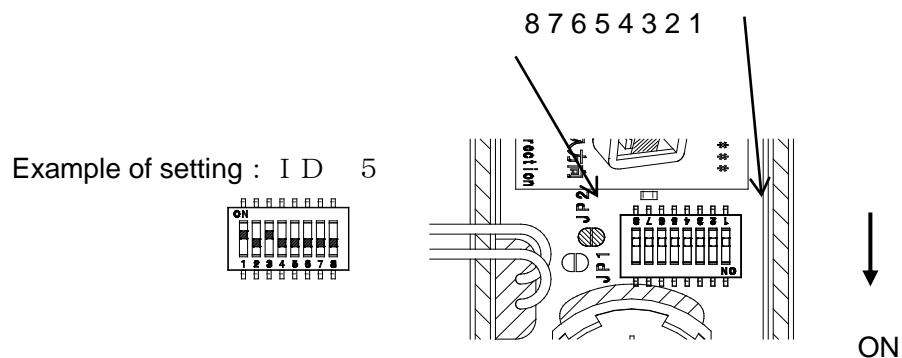

| Bit | Bit weight | Decimal number |
|-----|------------|----------------|
| 1 | $2^0 =$ | 1 |
| 2 | $2^1 =$ | 2 |
| 3 | $2^2 =$ | 4 |
| 4 | $2^3 =$ | 8 |
| 5 | $2^4 =$ | 16 |
| 6 | $2^5 =$ | 32 |
| 7 | $2^6 =$ | 64 |
| 8 | $2^7 =$ | 128 |

Add "ON bit".
e.g.: If "1" and "3" are ON, $1 + 4 = 5$

The examples of ID setting are shown below.

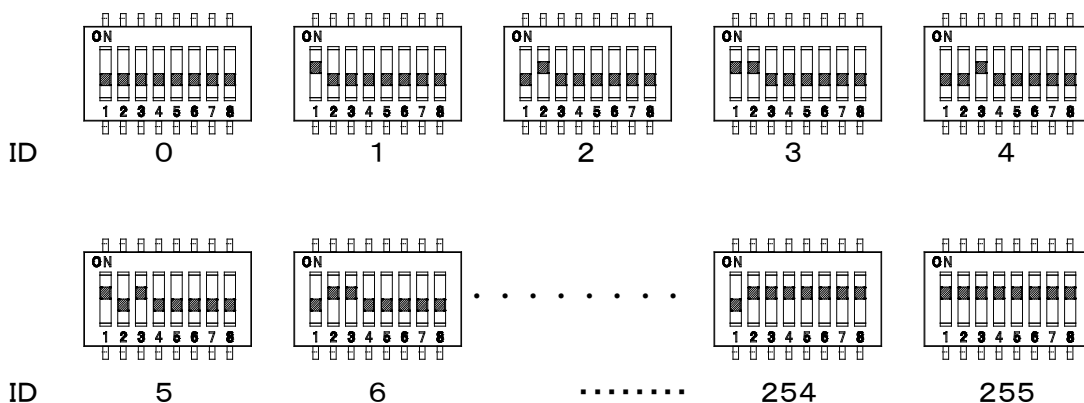

The 8-bit ID includes 256-type ranging from 0 to 255.

6.To change the ID setting

6-2.To change the ID setting


Pull out the fixing screw of Transmitter, and disassemble the main body from the Seat.

Change the ID of Transmitter according to the Display stated in previous page.

Verify that Receiver is set in the same contents as well.

Set the lever of Dip Switch using the sharp edge like Prick punch.

The Dip Switch can be easily damaged. Do not apply an excessive force during setting.

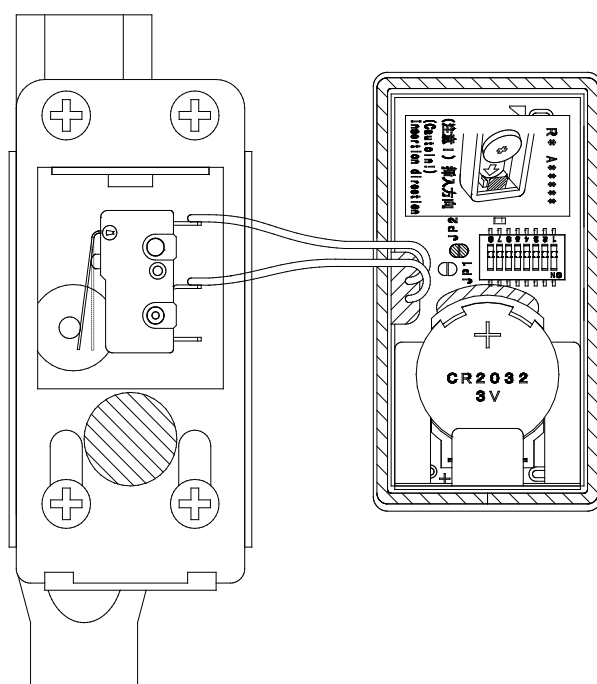

Test the transmission before assembling to check that Receiver is consistent with the ID number.


Upon completion of setting, install the Transmitter according to "5-2 Installation" with an attention being paid not to bite the cord.

7.Operational methods

7.Operation methods

7-1.To test the Transmitter

- Push the Test switch of Transmitter using the edge of ball-point pen.
(LED is lit on Battery check window and data for one shot is transmitted.)
- Verify the Transmitter for LED lighting conditions through the Battery check window.
- If LED blinks or does not light on during Test switch being pressed, replace the battery (CR2032).
- The battery should be checked not only before operation but also after use.
- Checking the operation(Output, Buzzer sound) of Receiver allows you to confirm the communication status.

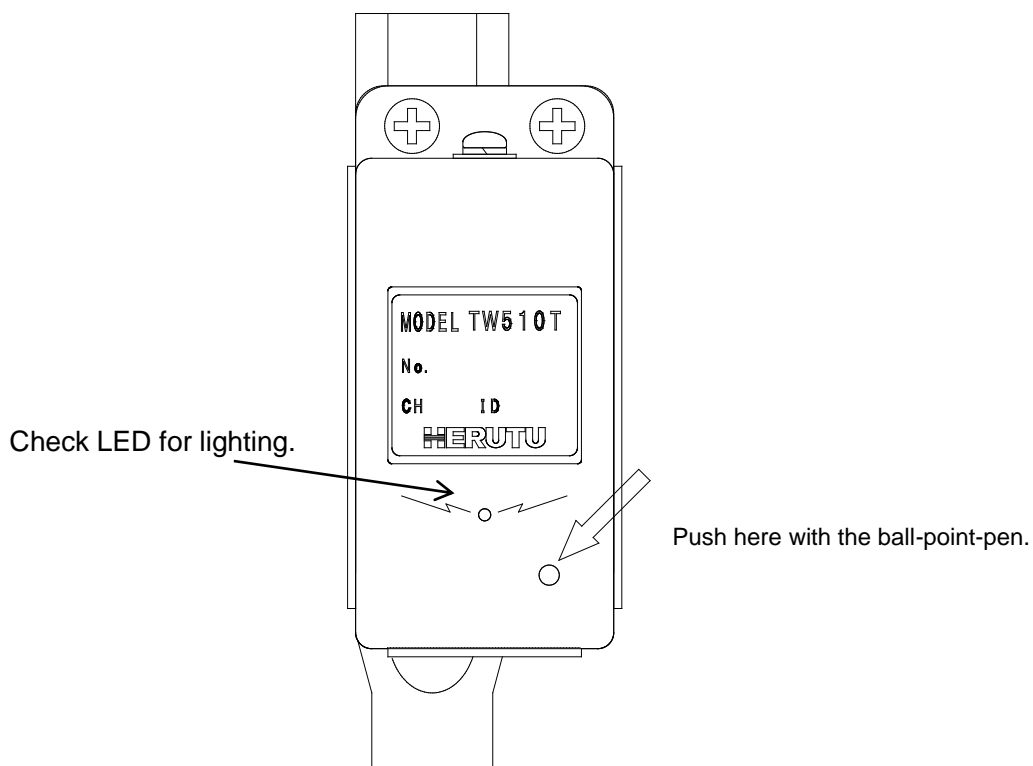


7.Operational methods


7-2.Operating timing

- The following figure shows the operating timing of Limit switch/Transmitter.

Limit switch:

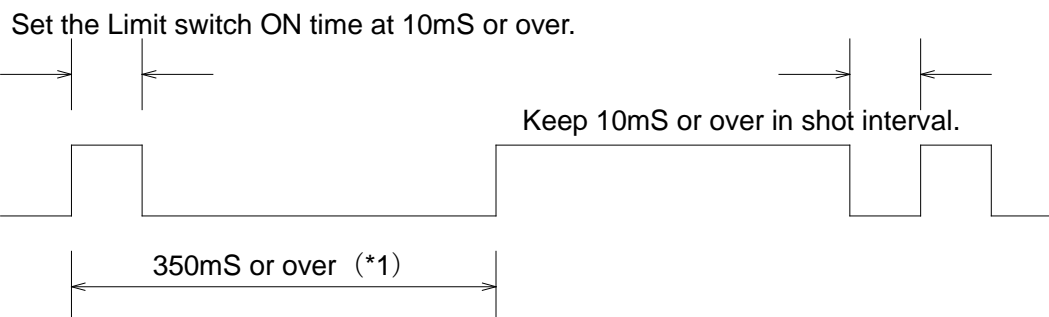

Transmitter

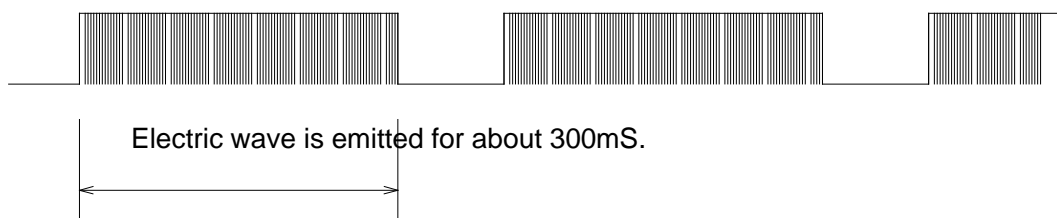


- The TW-510 model enables the transmission at the interval of 350mS or over.

- *1 This interval time should be more than the double counting prevention time of Receiver.
- The Receiver has the double count prevention function to avoid the double counting.
- For detail of double counting prevention time, see the operation manual of each receiver.

7.Operational methods

7-3.To replace the battery



Pull out the fixing screw from Transmitter, and disassemble it from the Seat.

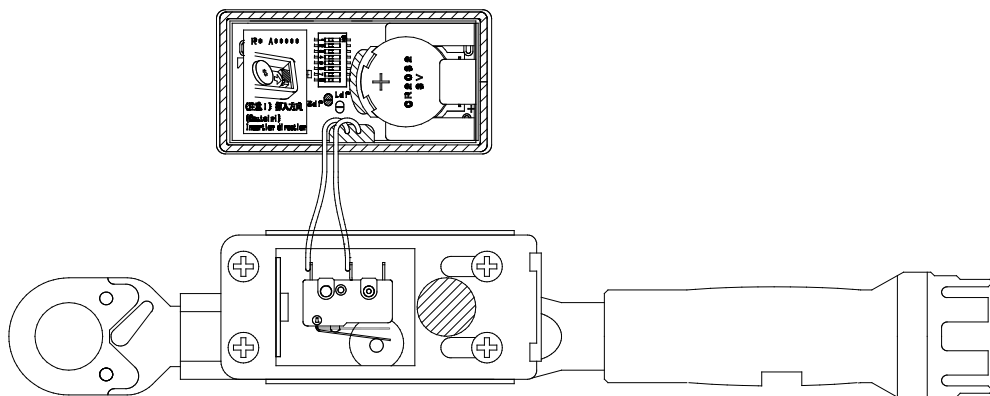


<Installation and removing the coin battery for transmitter>

●Installation the coin battery for transmitter

"+ terminal side" of a coin battery (CR2032) is turned up.A coin battery is previously inserted in a gilding terminal part like following figure ②. Then, as shown in the following figure ①, a coin battery is lightly pushed in from a top. Please push until it snap on so that it may get hung up to two pawls of the resin part of a battery holder.

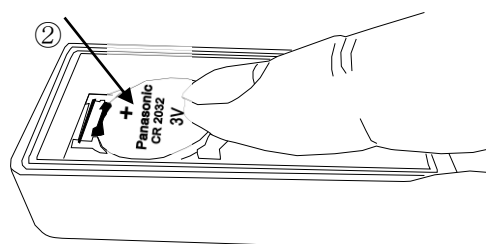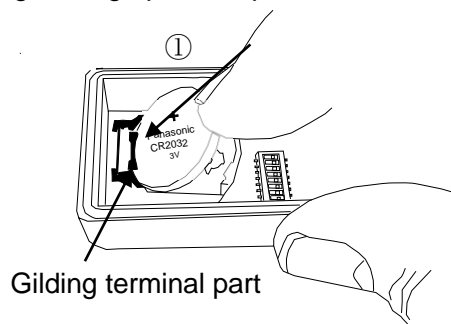


[Caution!]
Please be sure to insert a battery from a gilding terminal part. If it inserts from a resin part, a gilding terminal part may be damaged.

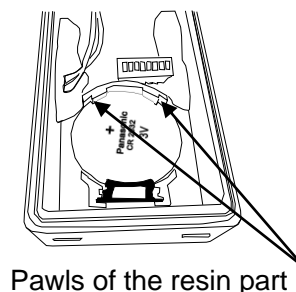

7.Operational methods

●Removing the coin battery for transmitter


When removing a coin battery by exchange etc., as a tip is not sharp and shown in the following figure①, It inserts so that the bottom portion of a battery may be raised lightly. As shown in the following figure②, a battery removes from the pawl of a gilding terminal part.

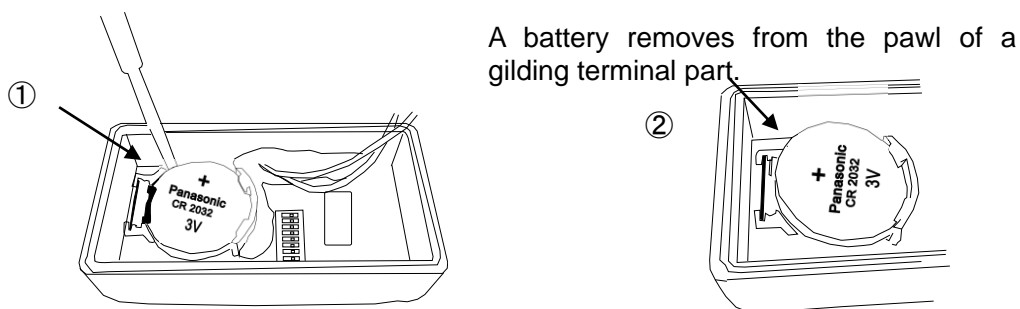

[Caution!]

In the case of installation a battery and removing, please carry out carefully so that the limit switch cable of TW-800T is not broken. We recommend you to work removing a limit switch cable from a connector.

Replace the old battery with the new one(CR2032) , hook the Transmitter on the Case holder, set it with an attention being paid not to bite the cord, and then fix it with the set screw as firmly pushing the case.

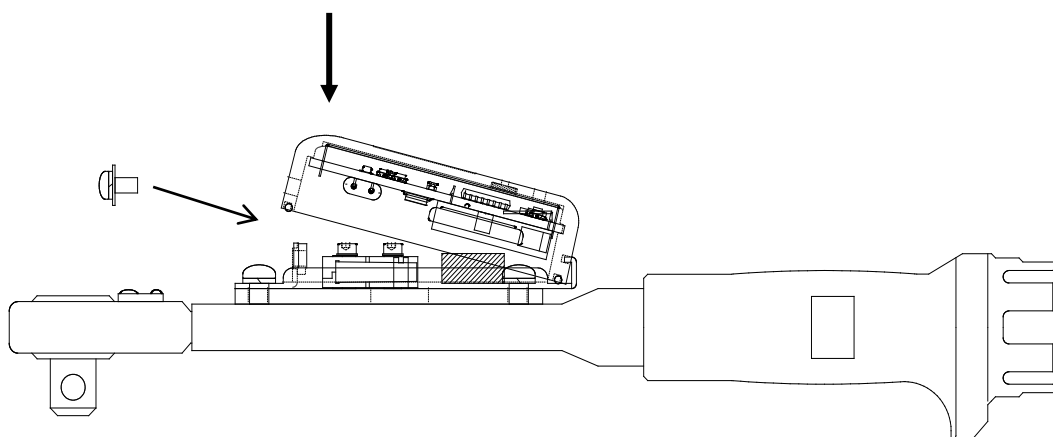

When new battery is set, it is possible to emit an electric wave per shot.

8. Precautions during use

8. Precautions during use

- This machine is the precision equipment covered with plastic frame. Do not give an excessive impact.
- Use a care during setting as the Dip Switch for setting ID can be easily damaged. Carefully make setting using the edged tool like Prick punch.
- Shift the battery to the arrow mark side before disconnecting the battery.
- Do not use the edged tool like prick punch when pressing the Test switch.
(Use an extreme care not to damage the Pawl of Battery holder during replacement of battery.)
- Use a care not to bite the cable of Limit switch when replacing a battery or changing the ID setting.

■ About the reliability of the wireless communication.

Wireless communication has the aptitude different from Wired, and generates a Wireless communication error by following factor.

- Over the wireless communication length
- There is entered dead point.
- There is a strong jamming beam.

When it's a problem on the practical use to be interfered with later when being frequently interfered with, please use after use is canceled and the cause of the interference is excluded. The situation that a wireless communication can't also be received besides the above factor occurs, so after understanding beforehand, please use.

※ A sent radio wave influences a reflected radio wave on a wall from a transmitter, and dead point is the area a radio wave becomes weak extremely where.

It can't sometimes be received by simultaneous sending * done case and receiving equipment from more than 2 transmitters in the same channel (frequency). Even if the ID setting is made different setting for a phenomenon by intervention of the frequency which is being transferred by air, it isn't possible to settle the same symptom. When practical use like the above is assumed, it's necessary to correspond by channel change, so please even consult about our Sales Division.

*: Sending at the same time within about 0.5 seconds with the simultaneous sending I say here is meant.

When shipping a transmission channel of a this machine only by 1 wave, it'll be fixing. It isn't possible to receive a signal by a receiver in a channel different from a transmitter.

9.Troubleshooting

9.Troubleshooting

[Normal communication does not run]

- ◇ Is the battery used up?
 - : Depress the test SW to check if battery check LED lights on.
- ◇ Are “Radio frequency and ID” different from those of Receiver?
 - : Check the Receiver for its channel and ID.
- ◇ Is this machine used outside the radio wave access range?
 - : Use this machine within the radio wave access range.
- ◇ Does the dead point occur?
 - : If commutation does not run at a given point, dead point might have occurred. Change the position of Receiver (Layout changing also allows to change) or we recommend you to use the Diversity type Receiver (TW—***RD) Contact our sales office for demonstration equipment.
- ◇ Is the moving range of wrench lever is out of the movable range of limit switch during operation of wrench?
 - : Verify the Limit switch for its installation.
- ◇ Is a noise generated?
 - : If communication does not run during a given time zone or due to the operation of the specific device, noise might be generated.

10.Warranty

10.Warranty

The provisions of warranty are set forth by us for warranty of the product after shipment so that the product can be used with a sense of security after purchased. In case our product is out of order, we will provide repair or replacement under the provisions of warranty.

■ Warranty period

Besides, as long as there is not providing, the warranty period shall be 13 months after shipping the products. During the warranty period, we will provide free-of-charge repair subject to the provisions of warranty set forth in the warranty certificate.

If you have anything unclear about the repair or follow-up service during the warranty period, please contact the outlet store through which you purchased the product or our Sales Office.

■ Scope of warranty

If the product should get out of order under the normal conditions of use by the customer, we will repair the failed section(s) free of charge or exchange the new one free of charge subject to the provisions of warranty. Please contact the outlet store through which you purchased the product or our Sales Office.

Also, the warranty period shall be 13 months after shipping the product or shall be 6 months after shipping substituting goods. The warranty periods will be applied the period visited later.

Note, however, that free-of-charge repair under this warranty is limited to the hardware components of the product. Even during the warranty period, the customer shall be responsible for repair cost if any of the following applies:

1. Troubles or damages occurring due to improper handling by the customer, such as a fall, a shock, etc. during transportation or movement of the product by the customer.
2. Troubles caused by overhaul or remodeling of the main body by the customer.
3. Troubles or damages caused by fire, earthquake, flood damage, or other natural disasters, as well as by abnormal voltage.
4. Troubles resulting from any trouble of devices connected to the product, which Devices are other than those designated by us.
5. Troubles with the accessories (AC adapter, antenna, connection cables, or the like) except the main body.
6. Repairing, adjustment, modification by except our company

10.Warranty

7. Replacement of consumables and limited-life items (including batteries).

Consumables and limited-life items include, but not limited to:

- (1) Switches (limit switches, pushbutton switches, or the like)
- (2) Battery cells or batteries (dry batteries, button batteries, or the like)
- (3) Other items subject to consumption or limitation of life caused by use.

8. Troubles occurring due to handling against the use instructions or precautions specified in this operation manual.

■ Initial defects

The period within 30 days from the date of shipping the product is defined as the initial defect period for the product. The product will be replaced with a new one or repaired free of charge provided that it is returned to the outlet store through which you purchased the product or our Sales Office, checked, and recognized as having initial defects. For initial defects, we shall be responsible for the shipping cost.

But it is in Japan only. In case of purchasing the products out of Japan, it will be decided after conference about shipping cost for returning back, insurance cost, custom duty.

■ Disclaimer

We will assume no liability for any damages or monetary losses, direct or indirect, arising out of troubles, failures, or use of the product.

■ Repair service period

Only if we have the stock of parts for repairing, even if after finishing the warranty period, we will repair the product within 5 years after end of production or a fee.

However, we reserve the right to use substitute parts or devices for repairing purposes. If there are unavoidable reasons such as unavailability of service parts.

■ Others

●Independent of the warranty period, the product to be repaired shall in principle be brought into our site because of the necessity of using measuring instruments or the like for adjustments etc., and the shipping cost etc. incurred in bringing the product into our site shall be borne by the customer.

10.Warranty

- In such cases where you request a trip to your place for repair or need substitute devices during the warranty period, please contact the outlet store through which you purchased the product or our Sales Office. We will correspond for a fee.

- We reserve the right to refuse replacement or repair if we are unable to reproduce the concerned failure at our engineering department after receipt of a request for repair.

In addition, an additional charge may be made to the customer for the technical examination cost incurred in reproducing the failure.

- The information in this manual, our website, catalog we supply, is subject to change without prior notice. Please be forewarned.


11.Option

11.Option

The Protective cover case (for value) is available as an option to the Transmitter.

Model TW-510C-1


TW-510C-2

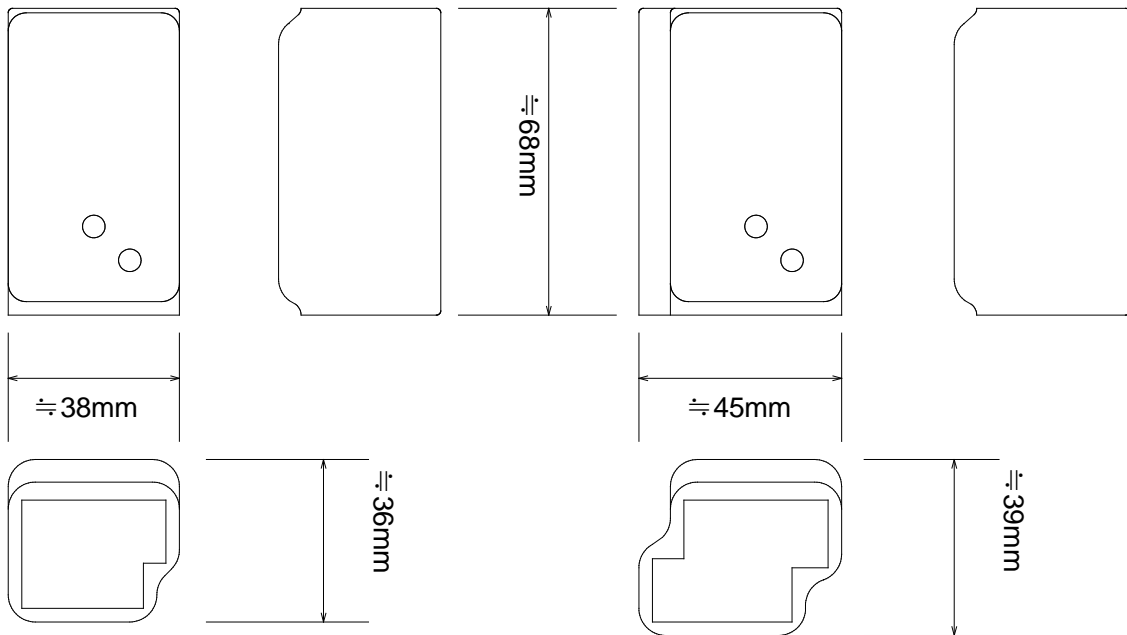

Material : Transparent soft polyvinyl chloride

Size : Reference value

Example of installation

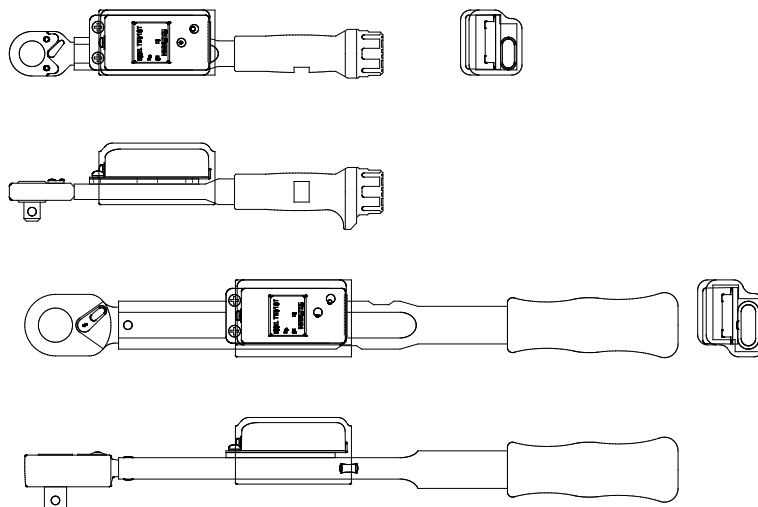

Appendix ID Setting list

| IDNo. | DIP SW 1~8 | IDNo. | DIP SW 1~8 | IDNo. | DIP SW 1~8 | IDNo. | DIP SW 1~8 | IDNo. | DIP SW 1~8 |
|-------|------------|-------|------------|-------|------------|-------|------------|-------|------------|
| 0 | 00000000 | 52 | 00101100 | 103 | 11100110 | 154 | 01011001 | 205 | 10110011 |
| 1 | 10000000 | 53 | 10101100 | 104 | 00010110 | 155 | 11011001 | 206 | 01110011 |
| 2 | 01000000 | 54 | 01101100 | 105 | 10010110 | 156 | 00111001 | 207 | 11110011 |
| 3 | 11000000 | 55 | 11101100 | 106 | 01010110 | 157 | 10111001 | 208 | 00001011 |
| 4 | 00100000 | 56 | 00011100 | 107 | 11010110 | 158 | 01111001 | 209 | 10001011 |
| 5 | 10100000 | 57 | 10011100 | 108 | 00110110 | 159 | 11111001 | 210 | 01001011 |
| 6 | 01100000 | 58 | 01011100 | 109 | 10110110 | 160 | 00000101 | 211 | 11001011 |
| 7 | 11100000 | 59 | 11011100 | 110 | 01110110 | 161 | 10000101 | 212 | 00101011 |
| 8 | 00010000 | 60 | 00111100 | 111 | 11110110 | 162 | 01000101 | 213 | 10101011 |
| 9 | 10010000 | 61 | 10111100 | 112 | 00001110 | 163 | 11000101 | 214 | 01101011 |
| 10 | 01010000 | 62 | 01111100 | 113 | 10001110 | 164 | 00100101 | 215 | 11101011 |
| 11 | 11010000 | 63 | 11111100 | 114 | 01001110 | 165 | 10100101 | 216 | 00011011 |
| 12 | 00110000 | 64 | 00000010 | 115 | 11001110 | 166 | 01100101 | 217 | 10011011 |
| 13 | 10110000 | 65 | 10000010 | 116 | 00101110 | 167 | 11100101 | 218 | 01011011 |
| 14 | 01110000 | 66 | 01000010 | 117 | 10101110 | 168 | 00010101 | 219 | 11011011 |
| 15 | 11110000 | 67 | 11000010 | 118 | 01101110 | 169 | 10010101 | 220 | 00111011 |
| 16 | 00001000 | 68 | 00100010 | 119 | 11101110 | 170 | 01010101 | 221 | 10111011 |
| 17 | 10001000 | 69 | 10100010 | 120 | 00011110 | 171 | 11010101 | 222 | 01111011 |
| 18 | 01001000 | 70 | 01100010 | 121 | 10011110 | 172 | 00110101 | 223 | 11111011 |
| 19 | 11001000 | 71 | 11100010 | 122 | 01011110 | 173 | 10110101 | 224 | 00000111 |
| 20 | 00101000 | 72 | 00010010 | 123 | 11011110 | 174 | 01110101 | 225 | 10000111 |
| 21 | 10101000 | 73 | 10010010 | 124 | 00111110 | 175 | 11110101 | 226 | 01000111 |
| 22 | 01101000 | 74 | 01010010 | 125 | 10111110 | 176 | 00001101 | 227 | 11000111 |
| 23 | 11101000 | 75 | 11010010 | 126 | 01111110 | 177 | 10001101 | 228 | 00100111 |
| 24 | 00011000 | 76 | 00110010 | 127 | 11111110 | 178 | 01001101 | 229 | 10100111 |
| 25 | 10011000 | 77 | 10110010 | 128 | 00000001 | 179 | 11001101 | 230 | 01100111 |
| 26 | 01011000 | 78 | 01110010 | 129 | 10000001 | 180 | 00101101 | 231 | 11100111 |
| 27 | 11011000 | 79 | 11110010 | 130 | 01000001 | 181 | 10101101 | 232 | 00010111 |
| 28 | 00111000 | 80 | 00001010 | 131 | 11000001 | 182 | 01101101 | 233 | 10010111 |
| 29 | 10111000 | 81 | 10001010 | 132 | 00100001 | 183 | 11101101 | 234 | 01010111 |
| 30 | 01111000 | 82 | 01001010 | 133 | 10100001 | 184 | 00011101 | 235 | 11010111 |
| 31 | 11111000 | 83 | 11001010 | 134 | 01100001 | 185 | 10011101 | 236 | 00110111 |
| 32 | 00000100 | 84 | 00101010 | 135 | 11100001 | 186 | 01011101 | 237 | 10110111 |
| 33 | 10000100 | 85 | 10101010 | 136 | 00010001 | 187 | 11011101 | 238 | 01110111 |
| 34 | 01000100 | 86 | 01101010 | 137 | 10010001 | 188 | 00111101 | 239 | 11110111 |
| 35 | 11000100 | 87 | 11101010 | 138 | 01010001 | 189 | 10111101 | 240 | 00001111 |
| 36 | 00100100 | 88 | 00011010 | 139 | 11010001 | 190 | 01111101 | 241 | 10001111 |
| 37 | 10100100 | 89 | 10011010 | 140 | 00110001 | 191 | 11111101 | 242 | 01001111 |
| 38 | 01100100 | 90 | 01011010 | 141 | 10110001 | 192 | 00000011 | 243 | 11001111 |
| 39 | 11100100 | 91 | 11011010 | 142 | 01110001 | 193 | 10000011 | 244 | 00101111 |
| 40 | 00010100 | 92 | 00111010 | 143 | 11110001 | 194 | 01000011 | 245 | 10101111 |
| 41 | 10010100 | 93 | 10111010 | 144 | 00001001 | 195 | 11000011 | 246 | 01101111 |
| 42 | 01010100 | 94 | 01111010 | 145 | 10001001 | 196 | 00100011 | 247 | 11101111 |
| 43 | 11010100 | 95 | 11111010 | 146 | 01001001 | 197 | 10100011 | 248 | 00011111 |
| 44 | 00110100 | 96 | 00000110 | 147 | 11001001 | 198 | 01100011 | 249 | 10011111 |
| 45 | 10110100 | 97 | 10000110 | 148 | 00101001 | 199 | 11100011 | 250 | 01011111 |
| 46 | 01110100 | 98 | 01000110 | 149 | 10101001 | 200 | 00010011 | 251 | 11011111 |
| 47 | 11110100 | 99 | 11000110 | 150 | 01101001 | 201 | 10010011 | 252 | 00111111 |
| 48 | 00001100 | 100 | 00100110 | 151 | 11101001 | 202 | 01010011 | 253 | 10111111 |
| 49 | 10001100 | 101 | 10100110 | 152 | 00011001 | 203 | 11010011 | 254 | 01111111 |
| 50 | 01001100 | 102 | 01100110 | 153 | 10011001 | 204 | 00110011 | 255 | 11111111 |
| 51 | 11001100 | | | | | | | | |

It is described 1:ON 0:OFF



HERUTU ELECTRONICS CORPORATION

422-1 Higashimikata-cho, Kita-ku, Hamamatsu, Shizuoka, 433-8104 Japan

(Sales dept) TEL.+81-53-438-3555 FAX. +81-53-438-3411

Website URL <https://www.herutu.co.jp/en/> E-mail info@herutu.co.jp